
DVI Converters:

Installation & Operation Guide



Edition 1.03
November 20, 2012



Contents

Chapter 1	Product Information	1
	About DVI Converters	1
	Options	1
	Key Features & Specifications	2
	Output Panel Detail	3
	Video Input Detail	4
	Customer Service and Support	5
Chapter 2	Installation Instructions	7
	SD-DVI Converter Installation	7
	SDI-DVI Converter Installation	8
	RGB-DVI Converter Installation	10
	RS-232 Control	11
Chapter 3	Using the Control Buttons	13
	About the Control Buttons	13
	Selecting Adjustment Modes	14
	RGB-DVI Converter Adjustment Modes	15
	SD-DVI Converter Adjustment Modes	16
	Restoring Factory Defaults	17
	Auto Increment & Decrement	18
Appendix A	RS-232 Protocol	19
	DVI Converters Command Set	19



PRODUCT INFORMATION

1

ABOUT DVI CONVERTERS

Black Diamond Video offers a line of single-link, externally or phantom-powered DVI converters which you can use to convert your RGB, SD, and SDI video signals to single-link DVI. With the appropriate DVI converter, you can use any of these alternate video formats as an input source for Black Diamond Video digital video processing equipment.

The system diagram (*Figure 1*) illustrates the full functionality of a DVI processor when combined with Black Diamond Video's DVI Converters and DVI X-treme Cable Kits.

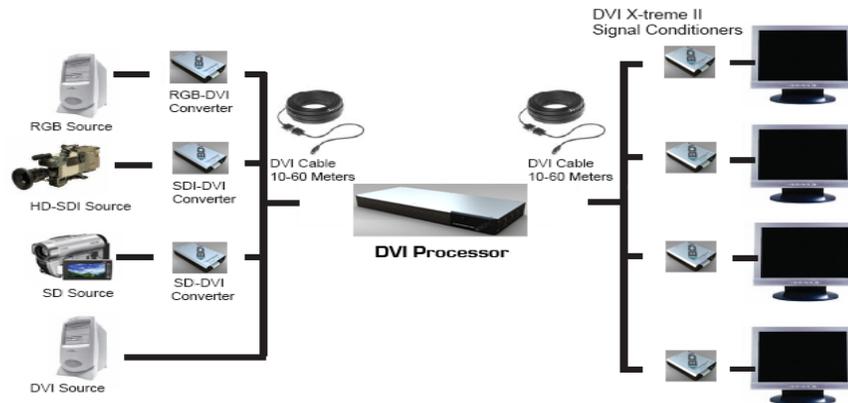


FIGURE 1. System diagram using DVI Converters

OPTIONS

The following DVI converters are available:

- **SD-DVI Converter** converts any standard-definition analog signal (NTSC, PAL, SECAM) to DVI. This converter is controlled and integrates seamlessly with Black Diamond Video digital video processing equipment.
- **SDI-DVI Converter** converts any serial digital interface signal (SDI) to DVI. This converter is integrates seamlessly with Black Diamond Video digital video processing equipment.



PRODUCT INFORMATION

Key Features & Specifications

- **RGB-DVI Converter** converts any analog RGB signal to DVI. This converter is controlled and integrates seamlessly with Black Diamond Video digital video processing equipment.

KEY FEATURES & SPECIFICATIONS

Features and specifications include the following:

VIDEO INPUT

- The **SD-DVI Converter** accepts any standard-definition analog signal (NTSC, PAL, SECAM). Connectors: 3 BNCs: Composite Video, S-Luma, S-Chroma; Y,Cb,Cr.
- The **SDI-DVI Converter** accepts any serial digital interface signal (SDI). Connector: 75 Ohm BNC input connector; DVI-D, 75 Ohm BNC output connector for loop-through.
- The **RGB-DVI Converter** accepts any analog RGB signal. Connector: DB15 RGB.

VIDEO OUTPUT

- Single-link DVI. Connector: DVI Female.

CONTROL

- RS-232 serial control of the Externally-powered RGB-DVI and SD-DVI Converters. Connector: RJ11. An RJ11 to DB9 female serial cable is included with all converters.
- Manual control of the Externally-powered RGB-DVI and SD-DVI Converters using external mode setting and selection buttons.

POWER

- Converters are equipped with a +5V AC/DC adapter.

DIMENSIONS

- 4.6" length x 2.69" width x 1.07" height.

PRODUCT INFORMATION

Output Panel Detail

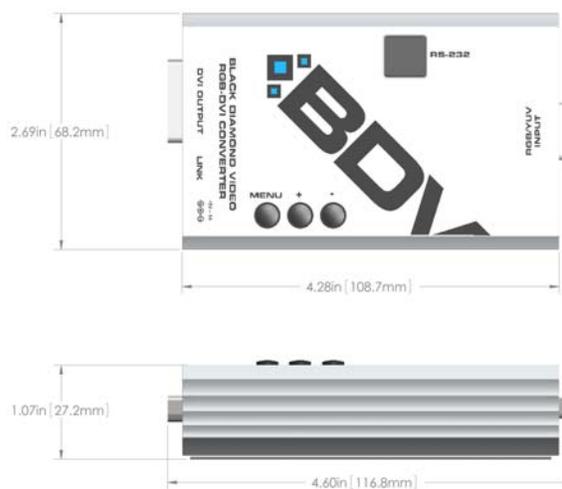


FIGURE 2. Externally-Powered RGB-DVI Converter dimensions (same for all BDV converters)

OUTPUT PANEL DETAIL

Figure 3 details the DVI output panel of the RGB-DVI, SD-DVI, and SDI-DVI Converters. This panel also contains the power input connector and the Link status LED. The Link status LED indicates a variety of status and functions by the color and pattern of the light. For example, the LED flashes a green blinking pattern when an active connection to the

PRODUCT INFORMATION

Video Input Detail

converter is established, and a red blinking pattern to indicate that an active video input connection exists.

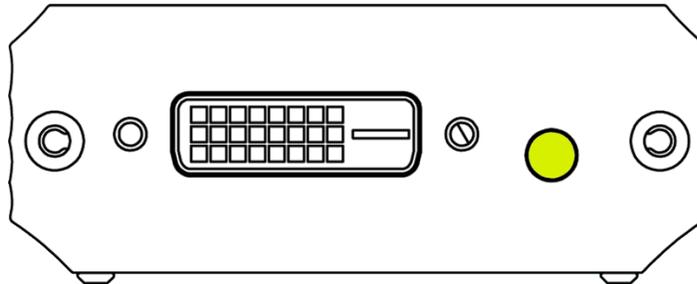


FIGURE 3. DVI output panel

VIDEO INPUT DETAIL

Figure 4 details the video input panel of the RGB-DVI Converter.

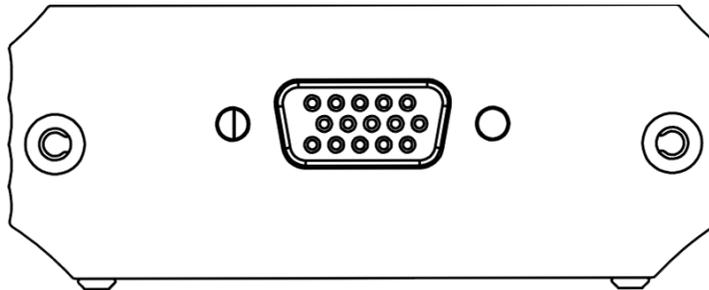


FIGURE 4. RGB/YUV input panel of the RGB-DVI Converter



Figure 5 details the video input panel of the SD-DVI Converter.

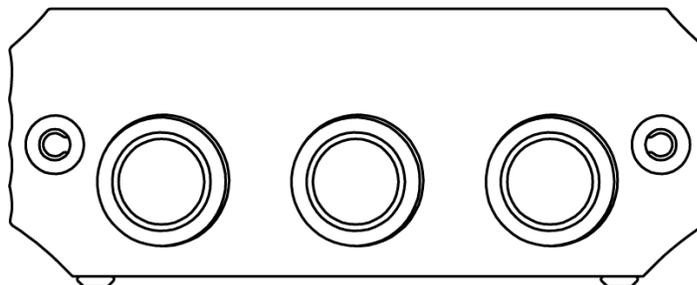


FIGURE 5. Input panel of the SD-DVI Converter

Figure 6 details the video input panel of the SDI-DVI Converter.

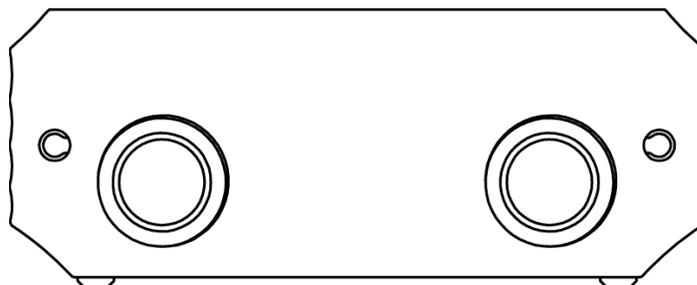


FIGURE 6. Input panel of the SDI-DVI Converter

CUSTOMER SERVICE AND SUPPORT

For technical support and service, contact Black Diamond Video at:

Black Diamond Video

503 Canal Blvd.

Point Richmond, California, 94804

Phone: (510) 439-4500

Fax: (510) 439-4599

Visit us on the web at www.blackdiamondvideo.com.



PRODUCT INFORMATION
Customer Service and Support

INSTALLATION INSTRUCTIONS

This chapter tells you how to install your SD-DVI, SDI-DVI, or RGB-DVI converter.

IMPORTANT!

This product must be tested with the intended equipment before being permanently installed. Failure to do so voids any warranty and limited liability. Although Black Diamond Video tests the product to its fullest extent, situations may arise giving marginal results or potential compatibility issues when used with digital video display devices that are non-compliant or incompatible.

SD-DVI CONVERTER INSTALLATION

Figure 7 illustrates the installation of the Phantom-powered SD-DVI converter. The following procedure describes the installation process of phantom and externally-powered SD-DVI converters.

NOTE: DVI Converters should be connected as close to the video source as possible to minimize cable problems such as noise and attenuation.

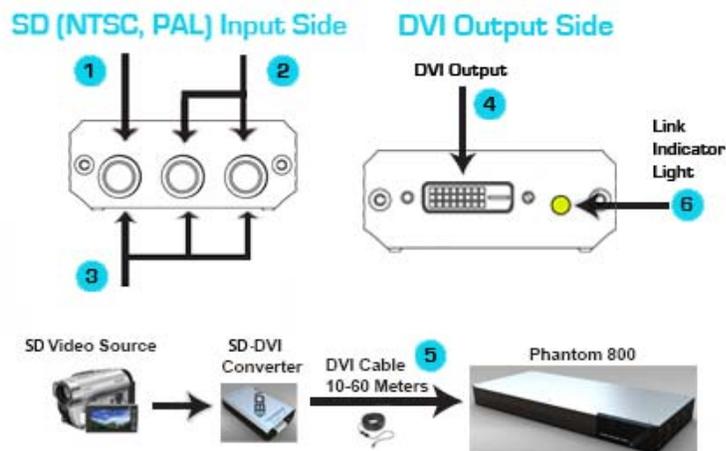


FIGURE 7. Phantom-Powered SD-DVI Converter installation

INSTALLATION INSTRUCTIONS

SDI-DVI Converter Installation

To Install the SD-DVI Converter

- 1 **If you are using a phantom-powered converter, proceed to the next step. If you are using an externally-powered converter:**
 - a Before installing the SD-DVI converter, connect the supplied power adapter to the unit and plug it into an AC power source. Black Diamond Video recommends the use of a surge protector.
 - b Connect your transformer to the converter.
- 2 **Connect composite video sources to the BNC connector labeled “Y/CVBS”.**
- 3 **Connect S-Video sources to the BNC connectors labeled “Cb/S-Y” and “Cr/S-C”**
- 4 **Connect component sources to the BNC connectors “Y/CVBS”, “Cb/S-Y” and “Cr/S-C”.**
- 5 **Connect the DVI output of the converter to a Black Diamond Video-tested DVI cable.**
- 6 **Connect the other end of the DVI cable directly to the Black Diamond Video digital video processing equipment in your installation, such as the Phantom 800 or CXPS.**
- 7 **The Link LED indicator on the converter flashes green when an active connection to the converter is established.**

Installation of the SD-DVI Converter is complete.

SDI-DVI CONVERTER INSTALLATION

Figure 8 illustrates the installation of the Phantom-powered SDI-DVI converter. The following procedure describes the installation process of Phantom and Externally-powered SD-DVI converters.

NOTE: DVI Converters should be connected as close to the video source as possible to minimize cable problems such as noise and attenuation.

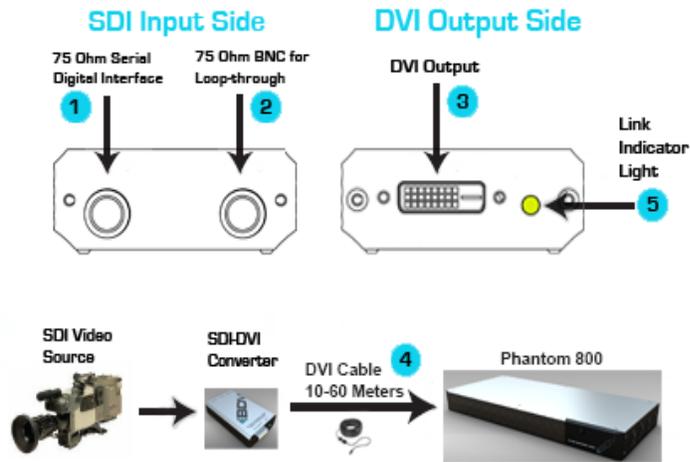


FIGURE 8. Phantom-powered SDI-DVI Converter installation

To Install the SDI-DVI Converter

- 1** If you are using a phantom-powered converter, proceed to the next step. If you are using an externally-powered converter:
 - a** Before installing the SDI-DVI converter, connect the supplied power adapter to the unit and plug it into an AC power source. Black Diamond Video recommends the use of a surge protector.
 - b** Connect your transformer to the converter.
- 2** Connect the 75 Ohm Serial Digital Interface source to the BNC connector labeled SDI Input.
- 3** If desired, connect a 75 Ohm Serial Digital Interface output to the BNC connector labeled SDI Output for loop-through connection to the SDI source.
- 4** Connect the DVI output of the converter to a Black Diamond Video-tested DVI cable.
- 5** Connect the other end of the DVI cable directly to the Black Diamond Video digital video processing equipment in your installation, such as the Phantom 800 or CXPS.
- 6** The Link LED indicator on the converter flashes green when an active connection to the converter is established.

Installation of the SDI-DVI Converter is complete.

INSTALLATION INSTRUCTIONS

RGB-DVI Converter Installation

RGB-DVI CONVERTER INSTALLATION

Figure 9 illustrates the installation of the RGB-DVI converter. The following procedure describes the installation process.

NOTE: DVI Converters should be connected as close to the video source as possible to minimize cable problems such as noise and attenuation.

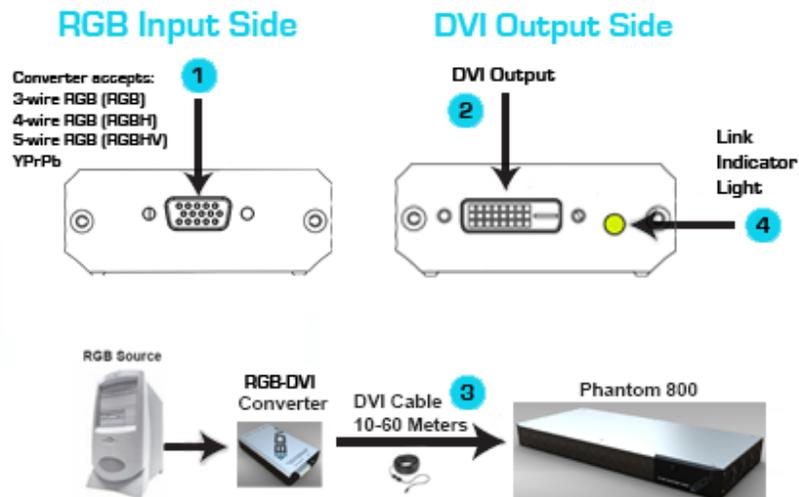


FIGURE 9. RGB-DVI Converter installation

To Install the RGB-DVI Converter

- 1** If you are using a phantom-powered converter, proceed to the next step. If you are using an externally-powered converter:
 - a** Before installing the RGB-DVI converter, connect the supplied power adapter to the unit and plug it into an AC power source. Black Diamond Video recommends the use of a surge protector.
 - b** Connect your transformer to the converter.
- 2** Connect 3 wire, 4 wire, or 5 wire RGB or YUV source to the DB15 HD connector labelled "RGB/YUV".
- 3** Connect the DVI output of the converter to a Black Diamond Video-tested DVI cable.

- 4 Connect the other end of the DVI cable directly to the Black Diamond Video digital video processing equipment in your installation, such as the Phantom 800 or CXPS.
- 5 The Link LED indicator on the converter flashes green when an active connection to the converter is established.

Installation of the RGB-DVI Converter is complete.

RS-232 CONTROL

Set up of the Externally-powered RGB-DVI and SD-DVI converters should be done using RS-232 control. The following procedure details how to establish RS-232 serial control with the DVI converter.

To establish RS-232 control of the DVI converter

- 1 Connect the supplied RJ11 to DB9 cable to the DVI converter.
- 2 Connect the control computer to the RS-232 DB9 connector on the supplied cable.
- 3 Open up a serial port terminal on the control computer.

On Microsoft Windows, you can use HyperTerminal for serial communications.

- 4 Configure the port settings as follows:

- Baud: 9600
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

The RS-232 connection to the DVI Converters is established and the converter can be controlled using the RS-232 command set found in Appendix A, "RS-232 Protocol."

NOTE: To avoid recreating the connection parameters each time you reestablish RS-232 connection to the CXPS, you can save the connection for subsequent control sessions.



INSTALLATION INSTRUCTIONS
RS-232 Control

USING THE CONTROL BUTTONS

This chapter tells you how to use the control buttons on the Externally-powered RGB-DVI and SD-DVI Externally-Powered Converters.

ABOUT THE CONTROL BUTTONS

The RGB-DVI and SD-DVI Externally-Powered Converters have three buttons you can use to modify settings on the devices. The buttons are labeled down (–), up (+), and Menu. *Figure 10* shows the top of the converters and the three control buttons.

The Link LED, located on the DVI output panel, flashes in different colors and patterns to indicate the current mode setting.

NOTE: You can also use RS-232 control to control the Converter. See Appendix A, “RS-232 Protocol,” for details.

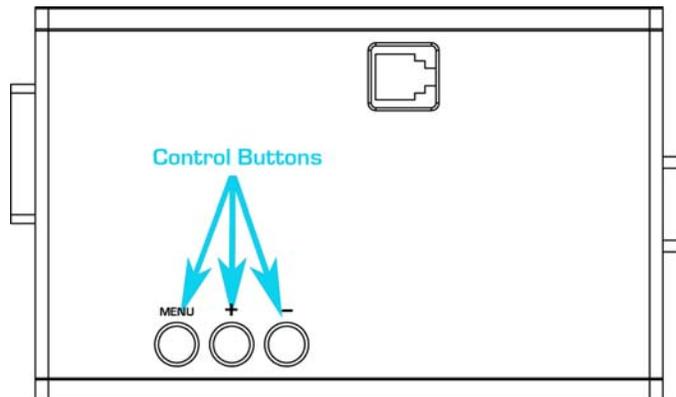


FIGURE 10. Control buttons on an externally-powered converter

NORMAL OPERATION MODE

When either of the two converters is in normal operation mode, the LED flashes in a pattern of two blinks, followed by three blinks, followed by four blinks. The LED color is red if the device is locked to an input or green if the device does not detect a valid input.

USING THE CONTROL BUTTONS

Selecting Adjustment Modes

ADJUSTMENT MODES

You can use the control buttons to modify various settings on the Externally-Powered Converters. The buttons are used to enter the different adjustment modes, such as Modulus and Horiz. Position for the RGB-DVI Converter and Saturation and Contrast for the SD-DVI Converter, and make setting changes.

SELECTING ADJUSTMENT MODES

The adjustment modes and how to select them are listed in the following table. For more information about the adjustment modes, see “RGB-DVI Converter Adjustment Modes” on page 15 and “SD-DVI Converter Adjustment Modes” on page 16.

Press and Hold 3 Seconds to Enter Mode	Adjustment Mode: RGB-DVI Converter	Adjustment Mode: SD-DVI Converter	LED pattern/color	Auto Increment & Decrement? ^a
–	Modulus	Brightness	Rapid Red blink	Yes
+	Phase	Contrast	Rapid Green blink	Yes for SD
– and +	Test Pattern	Input Format	Steady Green ^b	No
Menu and –	Horiz. Position	Saturation	Red, Red, Green	Yes for SD
Menu and +	Vert. Position	Hue	Green, Green, Red	Yes for SD
Menu and + and –	Test Pattern Rotate	N/A	Steady Green	No
Menu	Restore Factory Defaults	Restore Factory Defaults	Steady Red ^c	No

a. For more information on Auto Increment & Decrement, see “Auto Increment & Decrement” on page 18.

b. For the SD-DVI Converter, the LED pattern/color is Steady Green if the unit is in AutoSense mode. However, depending on the Input Format setting (see below), the LED is Steady Green but may flicker several times every 3-4 seconds.

c. The Restore Factory Defaults mode is special, but begins with the LED pattern and color in Steady Red mode. See “Restoring Factory Defaults” on page 17.

To Select an Adjustment Mode

- **To enter an adjustment mode that allows you to modify one of the device settings, hold one or more buttons down for three seconds.**

When the device is in the new setting mode, the LED blink pattern and/or color changes.

For example, if you want to change the input modulus on an RGB to DVI converter unit, press and hold the Down (–) button until the LED blink pattern changed to a rapid red



blinking pattern (about 3 seconds). At this point, the up and down buttons would set the modulus up and down.

NOTE: The changes that these adjustment modes make to the device can be seen immediately, but the changes are not be stored to non-volatile memory until you exit the adjustment mode and return to the normal operation mode. If the unit is powered off before the normal mode is re-entered, the changes made in the last adjustment mode are lost.

To Exit an Adjustment Mode

- To exit any of the adjustment modes, hold down the Menu button until the normal operation mode LED blink pattern returns (about 3 seconds).

RGB-DVI CONVERTER ADJUSTMENT MODES

There are six adjustment modes for the RGB-DVI Externally-Powered Converter.

MODULUS

Use this adjustment mode to modify the modulus applied to the RGB input signal.

PHASE

Use this adjustment mode to modify the phase applied to the RGB input signal.

TEST PATTERN

The RGB converter unit can generate nine different test patterns. In Test Pattern mode, you can select the output test pattern to be generated. The default output resolution is 640 x 480. Additional output resolutions are available via serial command. (See the `inputtestpattern` command in Appendix A, “RS-232 Protocol.”)

HORIZONTAL POSITION

In this mode, you can adjust the horizontal position of the RGB input relative to the output.

VERTICAL POSITION

In this mode, you can adjust the vertical position of the RGB input relative to the output.

TEST PATTERN ROTATE

In this mode, each of the nine test patterns are displayed at a resolution of 640 x 480. Each test pattern remains on the output for approximately five seconds.

USING THE CONTROL BUTTONS

SD-DVI Converter Adjustment Modes

SD-DVI CONVERTER ADJUSTMENT MODES

There are five adjustment modes specific to the SD-DVI Externally-Powered Converter:

BRIGHTNESS

In this mode, you can adjust the brightness setting for the converter.

CONTRAST

In this mode, you can adjust the contrast setting for the converter.

INPUT FORMAT

The SD-DVI Converter has an input format setting that can be set to one of four possible values. By default, your converter is set to AutoSense input format. You can tell which format has been selected by the LED blink pattern:

- **AutoSense** - detects if either a composite or svideo signal is present and automatically selects the correct input format. The LED blink pattern is solid red.

NOTE: Autosense, due to hardware limitations, cannot detect component video input. If you are using a component video input, you must set the input format specifically to Component.

- **Composite** - sets the input format to Composite. The LED blink pattern is solid red, but the light flickers off once approximately every three to four seconds.
- **Svideo** - sets the input format to SVideo. The LED blink pattern is solid red, but the light flickers off two times every three to four seconds.
- **Component** - sets the input format to Component. The LED blink pattern is solid red, but the light flickers off three times every three to four seconds.

Setting the device to either Composite, Svideo, or Component will disable AutoSense mode and force the particular input setting, even if no signal is present in that input format.

To Set the Input Format

- 1 Press and hold - and + for three seconds.**

The LED pattern is Steady Green, indicating the input format adjustment mode is active.

- 2 Press the + button to move up through the format settings, from AutoSense to Composite, from Composite to Svideo, or from Svideo to Component.**
- 3 Press the – button, to move down through the format settings, from Component to Svideo, Svideo to Composite, or Composite to AutoSense.**

USING THE CONTROL BUTTONS

Restoring Factory Defaults

The input format list does not “wrap around.” Once you have reached the top of the list (Component) Pressing the + button is ignored. Likewise, once you are at the bottom of the list (AutoSense), - button presses are ignored.

- 4 **Verify which format you selected by observing the blink pattern of the Link LED. See “Input Format” on page 16 for a description of these patterns.**
- 5 **To exit the input format adjustment mode, hold down the Menu button until the normal operation mode LED blink pattern returns (about 3 seconds).**

SATURATION

Use this mode to adjust the saturation setting for the converter.

HUE

In this mode, you can adjust the hue setting for the converter.

RESTORING FACTORY DEFAULTS

This is the only adjustment mode that is shared by both the RGB- and SD-DVI Externally Powered Converters. In this mode, you can reset the device to the state that the firmware was in when it left the factory.

IMPORTANT!

Using this mode resets any settings that have been saved, and for the RGB-DVI Converter, deletes all saved hosts!

To Restore Factory Defaults

- 1 **Press the Menu button.**
When this mode is entered, the LED will be Steady Red.
- 2 **To confirm you wish to restore factory defaults, press and hold the + button until the LED changes to a pattern of blinking red.**
- 3 **To reconfirm you still would like to continue, press and hold the - button until the LED changes to a pattern of fast blinking red.**
- 4 **Finally, if you are absolutely sure you want to continue, send your last confirmation by pressing and holding the Menu button.**

The converter performs the Restore Factory Defaults action and then restarts.

NOTE: Pressing the wrong button in any of the pre-restore states causes the Restore Factory Defaults action to abort, taking the unit back to the normal operating mode.



USING THE CONTROL BUTTONS

Auto Increment & Decrement

AUTO INCREMENT & DECREMENT

For each adjustment mode that allows Auto Increment & Decrement (see “Selecting Adjustment Modes” on page 14, pressing and holding the + or – button for more than about a half second causes the setting to increment or decrement approximately four times per second. You can press and hold the adjustment button for continuous adjustment to the setting.

For adjustment modes that do not have Auto Increment & Decrement, you must do one button press for each incremental change to a setting.

RS-232 PROTOCOL

A

DVI CONVERTERS COMMAND SET

The externally-powered RGB-DVI and SD-DVI Converters are controlled by using RS-232 protocol. No adjustments may be made to the SDI-DVI Converter. Commonly used commands are presented and defined in the following tables covering image control, input and host timing control, and general system commands.

Arguments in [square brackets] are optional. Arguments in <angle brackets> are required. For example, typing `bri` by itself returns the current brightness setting. Typing `bri 0` sets the brightness level to 0. Typing `inputsave` with no arguments returns an error because the `inputsave` command requires the <inputnum> argument.

Commands can be entered using either the full command name or the abbreviated syntax. For example, to set the brightness level to 25, you could type either `brightness 25` or `bri 25`.

NOTE: RS-232 commands are *not* case-sensitive. Capitalization of either the commands or the parameters does not matter.

IMAGE CONTROL COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
BRIGHTNESS	<code>bri [+/-100]</code>	Sets brightness level.	RGB-DVI; SD-DVI
CONTRAST	<code>cont [0-200]</code>	Sets contrast level.	RGB-DVI; SD-DVI
HUE	<code>hue [+/-180]</code>	Sets hue level.	SD-DVI
SATURATION	<code>sat [0-200]</code>	Sets saturation level.	SD-DVI

INPUT AND HOST TIMING COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
HOSTLIST	<code>HLIST [hostnum]</code>	Displays one or all default hosts.	RGB-DVI

INPUT AND HOST TIMING COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
HOSTMATCH	HM	Lists all hosts that match the current input timing.	RGB-DVI
INPUTFORMAT	if [format]	Sets input format to composite/svideo/component	SD-DVI
INPUTLIST	inlist [inputnum]	Displays one or all input hosts.	RGB-DVI
INPUTLISTDEL	inlistdel <inputnum>	Deletes the input host at slot <inputnum>.	RGB-DVI
INPUTMODULUS	inmod	Interactively changes the input modulus. Controls: (-) decrease (+) increase (q) quit Note: when you type these control characters, nothing appears on the terminal screen, though the adjustments are visible in the output image.	RGB-DVI
INPUTNAME	inn <inputnum> <name>	Sets a name for the input host slot <inputnum> to <name>.	RGB-DVI
INPUTPHASE	inph	Interactively changes the input phase. Controls: (-) decrease (+) increase (q) quit Note: when you type these control characters, nothing appears on the terminal screen, though the adjustments are visible in the output image.	RGB-DVI

INPUT AND HOST TIMING COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
INPUTPOSITION	inpos	<p>Interactively changes the input position.</p> <p><i>Position adjustment controls:</i></p> <ul style="list-style-type: none"> j - left l - right i - up m - down <p><i>H/V active adjustment:</i></p> <ul style="list-style-type: none"> M,L - increase I,J - decrease <p><i>H step:</i></p> <ul style="list-style-type: none"> H - increase h - decrease <p><i>V step:</i></p> <ul style="list-style-type: none"> V - increase v - decrease q - quit <p>Note: when you type these control characters, nothing appears on the terminal screen, though the adjustments are visible in the output image.</p>	RGB-DVI
INPUTSAVE	ins <inputnum>	<p>Saves the current host to NVRAM at <inputnum>. Valid slot numbers are <0...31>.</p>	RGB-DVI

INPUT AND HOST TIMING COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
INPUTTESTPATTERN	intp <pattern> <host>	<p>Turns on the test pattern <pattern> with host <host>. The converter generates an RGB host signal internally.</p> <p>To turn the test pattern generator off, issue the command <code>intp 15 <host></code>. Although it is required, the <host> setting is ignored.</p> <p>Test patterns <pattern>:</p> <ul style="list-style-type: none"> 0 color bars 1 grey ramp 2 red ramp 3 green ramp 4 blue ramp 5 grey steps 6 red steps 7 green steps 8 blue steps 15 Turns the test pattern generator off <p>Output modes <host>:</p> <ul style="list-style-type: none"> 0 800x600 1 1024x768 2 1388x1024 3 1600x1200 4 1920x1080 5 1920x1200 	RGB-DVI
INPUTTIMING	int	Returns the input timing. If a valid input signal is not present, no values are returned.	RGB-DVI

SYSTEM COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
HELP	help	Lists all user commands.	RGB-DVI; SD-DVI
ID	id	Returns system information: model, manufacturing date, serial number, and firmware version.	RGB-DVI; SD-DVI
INPUTAUTONSENSE	inas [on/off]	<p>Turns input autosense on or off.</p> <p>When autosense is on, the SD-DVI unit attempts to automatically identify the format of the input signal (component, svideo, or composite).</p> <p>When autosense is off, the format of the input signal must be set using either the INPUTFORMAT command or the Menu button.</p>	SD-DVI



SYSTEM COMMANDS

Command	Abbreviated Command Syntax	Action	Applies To
RESTOREDEFAULT	rfd	Restores the factory defaults. NOTE: This deletes all stored hosts.	RGB-DVI; SD-DVI



RS-232 PROTOCOL
DVI Converters Command Set